 




Gator® Machete Pro



Gator® Machete

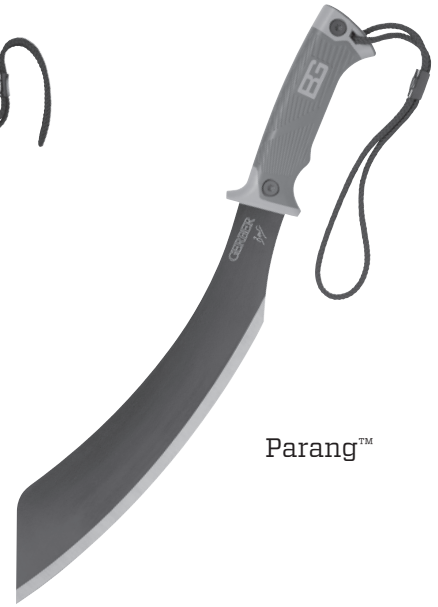

 
 
 
 
Parang™

SAFETY LANYARD INSTRUCTION

THE SAFETY LANYARD ON THE MACHETE/PARANG IS DESIGNED TO PROTECT THE USERS HAND FROM SLIPPING FORWARD ONTO THE BLADE OF THE MACHETE/PARANG. USING THE MACHETE/PARANG WITHOUT SAFETY LANYARD IN PLACE OR IN ACCORDANCE TO THESE INSTRUCTIONS MAY LEAD TO BODILY HARM OR DAMAGE.

MACHETE/PARANG USE




WITH CHOPPING BLADE (D) FACING DOWN, TAKE LOOP (A) OF SAFETY LANYARD AND SLIDE OVER THE MACHETE/PARANG HANDLE (B). THIS CREATES A LOOP (E) BELOW THE HANDLE (B). GRIP HANDLE INSERTING FINGERS THROUGH LOOP (E).

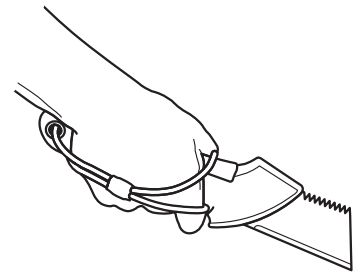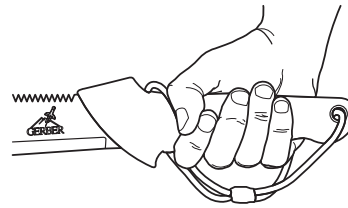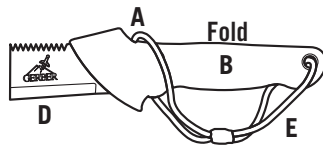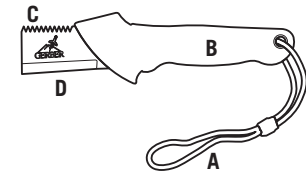

SAW USE (C)

(GATOR® MACHETE ONLY)

   WITH SAW BLADE (C) FACING DOWN, TAKE LOOP (A) OF SAFETY LANYARD AND SLIDE OVER THE MACHETE HANDLE (B). THIS CREATES LOOP (E) BELOW THE HANDLE (B). GRIP HANDLE INSERTING FINGERS THROUGH LOOP (E).

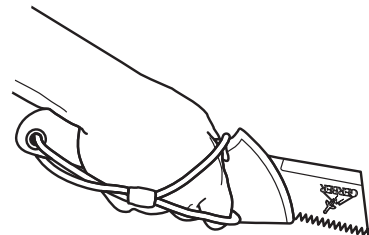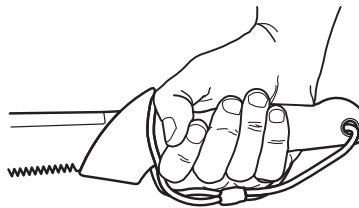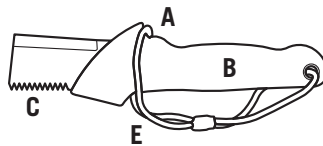

CAUTION

ANY USE OF THE MACHETE OTHER THAN FOR CUTTING IS CONSIDERED IMPROPER USE, AND MAY RESULT IN INJURY OR DAMAGE. DO NOT USE THE MACHETE FOR PRYING. HANDLE WITH CARE. CUT HAZARD: THE BLADES ARE SHARP AND CONTACT MAY RESULT IN INJURY. DURING USE, DIRECT THE SHARP POINT AND EDGES AWAY FROM YOU AND OTHERS. DO NOT PICK IT UP BY THE BLADE. ALWAYS SECURE HANDLE LANYARD TO HAND OR WRIST TO PREVENT CONTACT WITH BLADE. USE THE SAW BLADE FOR BRANCHES OF 1 INCH IN DIAMETER OR LESS. IF SAW BLADE JAMS WHILE CUTTING; USE EXTREME CARE WHEN DISLODGING IT. DO NOT USE THE MACHETE IF ITS BLADES ARE DULL, BENT, CHIPPED OR OTHERWISE DAMAGED OR IF THE HANDLE IS BROKEN OR LOOSE. WHEN USING THE MACHETE, WEAR PROTECTIVE CLOTHING AND SAFETY GEAR TO PROTECT YOUR EYES, HANDS, ARMS, LEGS, AND FEET. WHEN THE MACHETE IS NOT IN USE, STORE IN ITS SHEATH OR A SAFE PLACE. **KEEP OUT OF REACH OF CHILDREN.**

This product roll is for display purpose only. Product should always be carried in its sheath.



Camp Axe II



LMF™ II Infantry



D.M.F.™ Folder



Epic™



CAUTION

FOR USER & BYSTANDERS. USE WITH APPROVED EYE PROTECTION TO PROTECT FROM DEBRIS. FLYING DEBRIS CAN RESULT IN EYE OR OTHER INJURY. USE CUTTING EDGE FOR CUTTING WOOD ONLY. CONTACT WITH HARD OBJECT CAN RESULT IN BLADE OR HEAD CHIPPING. DO NOT USE TO STRIKE WITH OR AGAINST ANOTHER TOOL, HARDENED NAIL, OR OTHER OBJECT. DO NOT USE IF BLADE IS DULL, CHIPPED, OR OTHERWISE DAMAGED OR IF HANDLE IS BROKEN OR LOOSE. BLADE IS SHARP. HANDLE WITH CARE. CONTACT WITH BLADE CAN RESULT IN INJURY. WHEN NOT IN USE, STORE IN A SAFE PLACE. **KEEP OUT OF REACH OF CHILDREN.**



CAUTION

CUT HAZARD: SHARP BLADES. IMPROPER USE, CHISELING, ICE PICKING, PRYING, APPLYING FORCE ONTO BACK OF BLADE OR CONTACT MAY RESULT IN INJURY. ALWAYS KEEP BLADES AWAY FROM FINGERS AND BODY. DO NOT USE IF DAMAGED OR BLADE IS LOOSE OR APPLY FORCE ONTO BACK OF BLADES. HANDLE WITH CARE. IF NOT IN USE, STORE IN ITS SHEATH OR SAFE PLACE. **KEEP OUT OF REACH OF CHILDREN.**

This product roll is for display purpose only. Product should always be carried in its sheath.



GERBER GEAR
14200 SW 72ND AVENUE
PORTLAND, OREGON 9722
GERBERGEAR.COM

FISKARS®

33-004010 Rev A



FOR WARRANTY INFORMATION VISIT:
WWW.GERBERGEAR.COM/WARRANTY